 




USER MANUAL

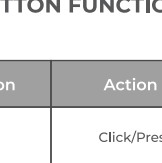

BUTTON FUNCTIONS

Signs on the Buttons	Function	Action	Usage
	Loop	Click/Press	Turn on the Loop Turn off the Loop
	Volume Up	Click/Press	Increase the volume
	Volume Down	Click/Press	Decrease the volume

Contd.

1

Signs on the Buttons	Function	Action	Usage
	Previous	Click/Press	Plays Previous Song
		Double Click/Press	Jumps 10 songs back
		Long Press	10 seconds rewind
	Next	Click/Press	Plays Next Song
		Double Click/Press	Jumps 10 songs
		Long Press	Ahead 10 seconds fast forward
	Play/Pause	Click/Single Press	To Play or Pause
	Power On/Off	Long Press	Long press the button to switch On/Off the device

2

DEVICE CONTENT

Explore from 500+ content and choose to play your favourite MODE - Rhymes, Learning, Podcasts, Stories.

Signs on the Buttons	Mode - Content
 Rhymes	200+ Nursery Rhymes and Lullabies for kids to sing and learn Like 'Old Mac Donald', 'Twinkle Twinkle Little Star', 'Johny Johny' and more
 Learning	50+ Songs to teach little one's ABCs, numbers, animals, and First Words with their Phonics
 Podcasts	40 engaging Podcasts like Cinderella And Rapunzel for kids to stimulate Their creativity, boost vocabulary & develop early learning skills
 Stories	200+ Classic Stories to teach kids moral values and good habits like 'Fox And The Grapes', 'The Lion and Mouse'


3

HOW TO ACCESS CONTENT

Signs on the Buttons	Action	Usage
 Audio Jack		Connect Headphones /Speakers
	Click/Press	Control Dancing LED to save power
	Click/Press	Pair Tablet/Phones/ Speakers

4

 DEVICE FUNCTIONS

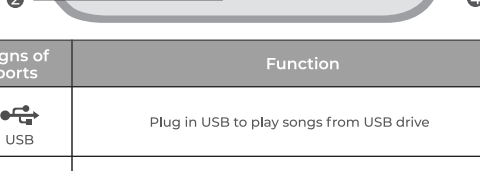

Signs of ports	Function
1	Plug in USB to play songs from USB drive
2	Reset button to set device back to factory settings Press for 3-5 seconds and device will turn off

Contd.

5

Signs of ports	Function
3	AUX IN port to plug in any external device sound
4	Turns on RED while charging Turns off on full charge
5	Type C USB charging port 5V 1A 50 Hz Charging time : 1-2 hours Playback time: 3-4 hours for fully charged device

6

SAFETY MEASURES

1. PRODUCT HANDLING:


- Do not expose the product to excessive dust or heat. (under direct sunlight, gas burners, heaters)
- Ensure no liquid spills onto the device, as this could cause malfunction or could prove to be a fire hazard.
- The device should only be cleaned with a dry cloth.
- Be careful not to pinch the cord or walk on it when close to the plug.
- Do not submerge the device in water.
- Electrical waste should not be disposed of with household waste. Please follow the disposal instructions provided by the local authority.

7

2. BATTERY HANDLING:

- Avoid exposing the battery to temperatures above 60°C.
- When disposing or recycling batteries, please ensure proper battery handling and disposal instructions from local authorities
- Avoid mechanical shocks to the battery pack.
- In case of battery leaks, do not let the liquid come in contact with the skin or eyes. If affected, clean the area with water and consult a doctor.
- Keeping the battery fully charged will prolong its life.
- A monthly battery charge of at least 4 to 5 hours is required to ensure optimal performance.


8

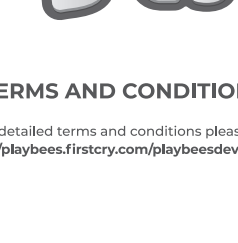

TERMS AND CONDITIONS

For detailed terms and conditions please visit <https://playbees.firstcry.com/playbeesdevice.html>

 9

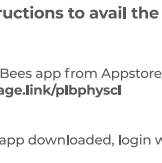

GET ACCESS TO 1000+ EDUCATIONAL ACTIVITIES FOR KIDS EARLY LEARNING

Follow these instructions to avail the PlayBees 1 year FREE Subscription:

- Download the PlayBees app from Appstore/Playstore
<https://playbees.page.link/plbphyscl>
- Once you have the app downloaded, login with your email ID registered with FirstCry.

Like the app?

- Please rate & review us on Appstore/Playstore. For more information, email us at playbees@firstcry.com